

WHAT IS NEEDED










WHAT IS INCLUDED

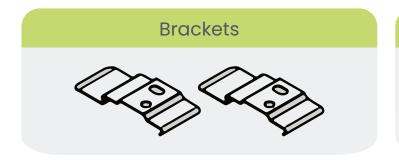



IMPORTANT INFORMATION

Be careful when opening packaging so as not to damage the fabric. If struggling to find the printed fitting instructions, they can often be found rolled up with the blind.

Please note, this blind is not suitable for side fixing and should only be top or face fixed. Additionally, on Spring Loaded Roller Blinds with no pull, the blind should always be pulled from the centre not the side, as this will pull the blind out of alignment.

Before installation, check the material of your window recess or surround - is it plaster, wood, metal or masonary? Each requires specific drill bits and rawl plugs to ensure a secure fit. Using the correct tools makes installation easier and ensures a secure fit.

FITTING THE BRACKETS






For a blind up to 1 metre wide, install two brackets at your window, roughly 75mm from each end of the blind.

If your blind is wider than 1 metre, fit the two end brackets as described, and add intermediate brackets, evenly spaced between the two end brackets.

TOP FIXING - INSIDE THE RECESS

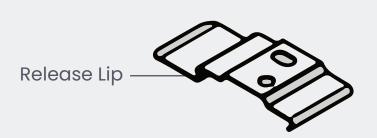


Hold each bracket in position and mark where the holes should be.
Attach each bracket using the appropriate screws and rawl plugs, ensuring that the fixings are suitable for the wall or surface you're mounting the brackets onto.

When securing to the top of a recess, be mindful to leave room for any protruding obstacles, such as vents or window handles.

FACE FIXING - OUTSIDE THE RECESS

Position each bracket and mark the locations for the holes.


Attach each bracket using the appropriate screws and rawl plugs, making sure the fixings are suitable for the wall or surface where the brackets will be mounted.

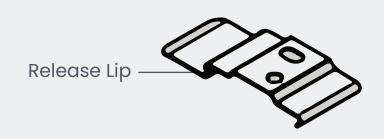

Please Note: The release lip on the bracket must face the back of the blind (shown above).

FITTING THE BLIND

2

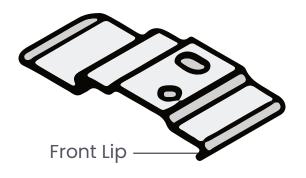

After all the brackets are installed, position the blind against them with the back bar tilted away from you. Hook the front edge into the bracket, then push upwards to snap the back bar into the rear edge of the bracket.

Once clicked into place, your new spring-loaded roller blind installation is complete.

When manufacturing your blind, our team will set the tension for you, but you can adjust it by either increasing or decreasing the tension if needed. Depending on where the blind has been installed, you may need to take it down to access the ends of the brackets.

Start by using a flathead screwdriver, adjust the tension as follows:

Turn clockwise to **increase** tension. Turn anti-clockwise to **decrease** tension.

Please note, we recommend only making half a turn at a time before testing the new tension, as adding too much tension can cause the spring to snap, rendering the blind unusable. For this reason, we also advise against using an electric screwdriver, as it can easily lead to overwinding.

ADJUSTING THE TOP LIMIT

4

The top limit is where the blind stops when fully opened. Our team sets this during production, but you can adjust it if needed.

You may need to remove the blind to access the bracket ends. Then simply adjust with a flat headed screw driver:

Turn **clockwise** to lower the top limit Turn **anti-clockwise** to raise it.

5

We'd love to see how your new blinds look in your home! Share your photos with us on social media, and don't forget to tag us **@orderblinds**.

Your stylish design could be featured on our page to inspire other customers. Whether it's a bold statement or a subtle touch, your space could be the perfect inspiration for others looking to refresh their home.

Our office opening hours are:

Monday - 9:00am - 5:00pm Tuesday - 9:00am - 5:00pm Wednesday - 9:00am - 5:00pm Thursday - 9:00am - 5:00pm Friday - 9:00am - 3:00pm

> Order Blinds Online Ltd Unit 10, Barbrey Business Park, Orston Lane, Bottesford Leicestershire NG13 0GY

ORDER BLINDS



